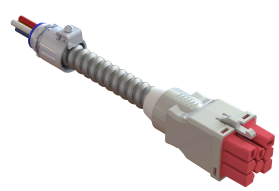
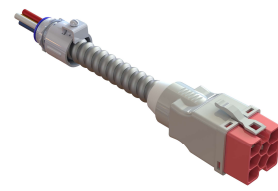
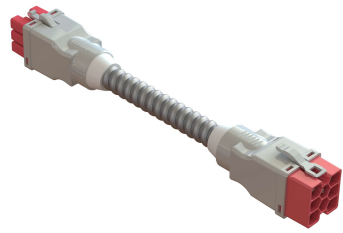
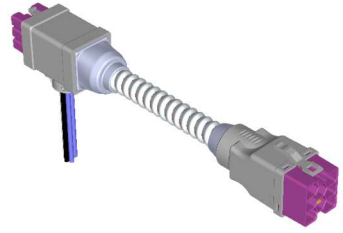
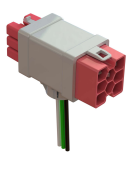
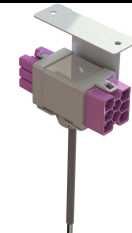
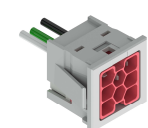
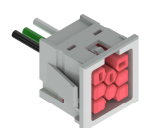


Component Part No.; 1H – VC – LNGO – F III T or W XYZ

1H						
----	--	--	--	--	--	--

<u>VC</u>	<u>LNGO</u>	<u>F</u>	<u>III</u>	<u>T</u>	<u>W</u>	<u>XYZ</u>
System	Application	Function	Length	Cable Type	Gauge	Options
22 = 125/250V 20A 2D = 125/250V 20A + Control 42 = 277/480V 20A + Control 4D = 277/480V 20A + Control 62 = 347/600V 20A 6D = 347/600V 20A + Control D2 = 60Vdc 20A DD = 60Vdc 20A + Control	3w 1110 = (L,N,G) 3w 1011 = 1P Switch 3w 2010 = (2L,G) 4w 1111 = Sw. w/ Neutral 4w 2110 = (2L,N,G) 4w 1120 = (L,N,G,IG) 4w 1012 = 3, 4-way Switch 5w 2210 = (2L,2N,G) 5w 3110 = (3L,N,G) 5w 1112 = 3, 4-way Sw. + N. 5w 1112 = (L,N,G,2 Control) 6w 2220 = (2L,2N,G,IG) 6w 3120 = (3L,N,G,IG) 7w 3310 = (3L,3N,G) 7w 4210 = (4L,2N,G) 7w 3112 = (3L,N,G,2 Control) 8w 3320 = (3L,3N,G,IG) 8w 4220 = (4L,2N,G,IG)	C = Starter Cable/Cord D = Drop Cable/Cord E = Extender Cable/Cord F = Fixture Tap G = Control Drop M = Multi Tap P = Plug R = Receptacle S = Switch Cable T = T Cable/Cord W = Fixture Whip Z = Phase Tap	blank = none Cable Length in dm. e.g. 040 = 4.0m XXX = not applicable/ or Cord/Tail Length 020 = 20cm (8in) 025 = 25cm (10in) 030 = 30cm (12in) 045 = 45cm (18in) 050 = 50cm (20in) 060 = 60cm (24in) 075 = 75cm (30in) 090 = 90cm (36in) 125 = 1.25m (4ft) 180 = 1.8m (6ft) 250 = 2.5m (8ft) 300 = 3m (10ft) 350 = 3.5m (11.5ft)	blank = none A = #12 AC90/MC B = #12 AC90 N = Upsized Neutrals U = #10 AC90/MC H = LSZH #12AC90/MC L = LSZH Upsized Neutrals M = #12 MC Z = LSZH #10 AC90/MC X = not applicable	blank = none W (Wire Gauge) 0 = #10 AWG 1 = #10 Shared Neutral 2 = #12 AWG 4 = #14 AWG 6 = #16 AWG 8 = #18 AWG	blank = none X (Cord Type) C = CMP (FT6) J = SJ (300V) S = S (600V) X = not applicable Y (Cord Colour) G = Gray K = Black W = White X = not applicable blank = none Z (Other Options) C = Female cord cap/ Cord connector A = "A" Style cord cap M = "M" Style cord cap W = Wire connector blank = none

"C" – STARTER CABLE	"D" – DROP CABLE	"E" – EXTENDER CABLE	"W" – FIXTURE WHIP
Connect to Source 	Connect to Load 		

"F" – Fixture Tap	"G" – Control Tap	"P" – PLUG	"R" – RECEPTACLE	"S" – SWITCH CABLE	"T" – T/CABLE	"T" – T/CORD
		Connect to Load 	Connect to Source 			

"M" – MULTI-TAP/SWITCH TAP	"Z" PHASE-TAP
